3P Technik UK

3P Helena

Art. No. 9000670K




3P Helena

Art. No. 9000670K



Instruction Sheet

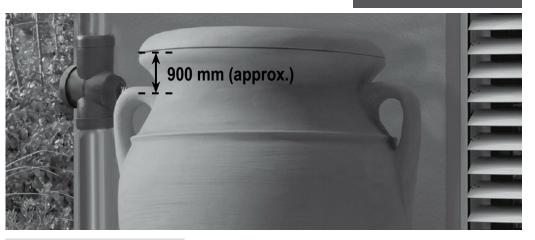

5. Childproof lid



Using the screw provided, fasten the lid via the hole beneath the rim of the water butt.

6. Tank to Tank Connection

It is possible to connect two Helena Water Butts together.

Please use the 3P Tank to Tank connection Kit (250 mm) Artno. 9000326





The Helena Water Butt is delivered with a full kit including a brass tap and hole saw. To fill the Helena, we recommend using the 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the down pipe, longer Universal Long Link Kits are available online (Art. No. 9000123U, U2, to U5).

If in any doubt during installation, please consult a professional tradesman.



www.3ptechnikuk.com

www.3ptechnikuk.com















1. Setting up

Site the Helena on a firm, level surface, adjacent to the downpipe.

Refer to your Filter Collector instructions or other rain diverter instructions. Connecting a tap is optional.

2. Fitting an (optional) 3P Filter Collector with Universal Link Kit

Marking Out

Measure down 90 mm from the lip of the water butt. This position is ideal for all connections at 32 mm (1 1/4") or less.

3. Connecting the Tap

With the 3/4" brass tap provided in the kit. Screw the tap into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap for extra protection and to make sure it sits in the correct position.

4. Winter Care Precautions

To prevent any damage from being caused, the Helena must be drained completely and disconnected from the rainwater inlet during freezing weather conditions.





Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Universal Filter Collector. select the 32 mm flat bit provided.

Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm (or at your selected holes size for your connection set.) Check and re-check you are going to drill the correct size of hole for the connection set that you are

Attaching a Back-Nut & Hose Tail

A back nut and rubber seal can be fitted as shown. Hold the back nut and rubber seal in position and screw in the hose tail.

Hose tail in Position

This picture shows a 1" BSP thread - 32 mm hose tail in position (within a 32 mm drilled hole).



Filter Collector Universal: Art. No: 2000840U