


3P Little Tree

Art. No. 9000730K Dark Brown
Art. No. 9000735K Light Brown

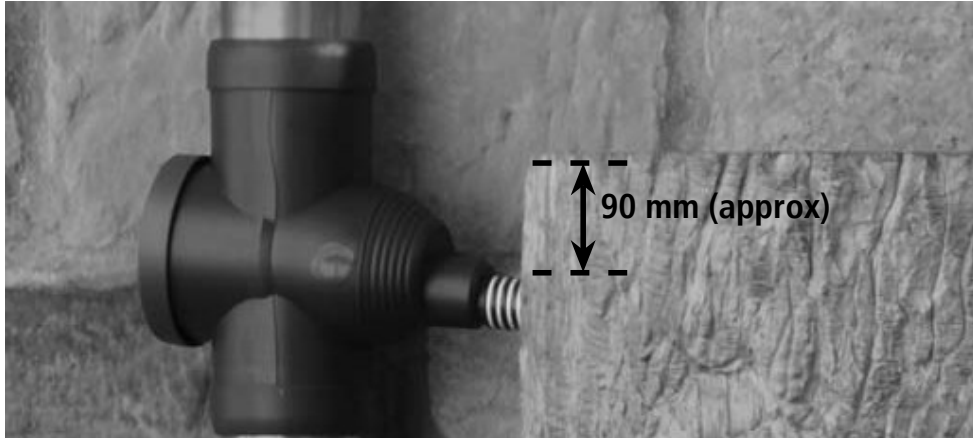

5. Childproof Lid


Using the screw provided, fasten the lid via the hole beneath the rim of the water butt.



6. Tank to Tank Connection

It is possible to connect two Little Tree Water Butts together.

Please use the 3P Tank to Tank connection Kit (250mm) Art-no. 9000326

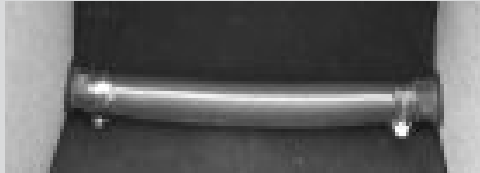

3P Little Tree

Art. No. 9000730K Dark Brown
Art. No. 9000735K Light Brown

3P Little Tree 250L Instruction Sheet



The Little Tree Water Butt is delivered with a full kit including a brass tap and wall bracket. To fill the Little Tree, we recommend using the optional 3P Filter Collector Universal.


Where the water butt cannot be located within 30 cm of the down pipe, longer Universal Long Link Kits are available online (Art. No. 9000123U, U2, to U5).

If in any doubt during installation, please consult a professional tradesman.



3P Little Tree

Art. No. 9000730K Dark Brown
Art. No. 9000735K Light Brown

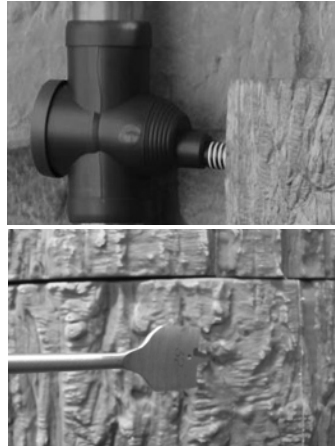

3P Little Tree

Art. No. 9000730K Dark Brown
Art. No. 9000735K Light Brown



1. Setting up

Site the Little Tree on a firm, level surface, adjacent to the downpipe.

Refer to your Filter Collector instructions or other rain diverter instructions. Connecting a tap is optional.

2. Fitting an (optional) 3P Filter Collector with Universal Link Kit

Marking Out

Measure down 90 mm from the lip of the water butt. This position is ideal for all connections of 32 mm (1 1/4") or less.

Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Universal Filter Collector, select the 32 mm flat bit from the set provided.

Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm. (If you are not fitting a 3P Filter Collector Universal then double-check that you are drilling a correctly sized hole for the connection set that you are using.)

Attaching a Back-Nut & Hose Tail

A back nut and rubber seal may be fitted. Hold the back nut and rubber seal on the inside of the hole and screw on the hose tail.

3. Connecting the Tap

Screw the 3/4" brass tap provided in the kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to ensure the tap sits in the correct position.

4. Winter Care Precautions

To prevent any damage from being caused, the Timberly must be drained completely and disconnected from the rainwater inlet during freezing weather conditions.

Filter Collector Universal: Art. No: 2000840U

