


3P Rainbowl

Art.-Nr. 9000860	Art.-Nr. 9000868
Art.-Nr. 9000862	Art.-Nr. 9000870
Art.-Nr. 9000864	Art.-Nr. 9000872
Art.-Nr. 9000866	Art.-Nr. 9000874

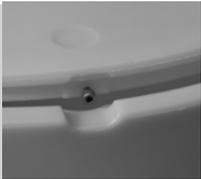


Childproof lid.



5. Tank-to-Tank Connection

If you wish, you may connect two Timberly Water Butts together using the 3P Tank to Tank connection Kit (250 mm), Art-no: 9000326

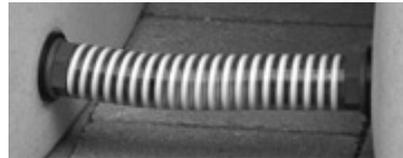

3P Rainbowl

Art.-Nr. 9000860	Art.-Nr. 9000868
Art.-Nr. 9000862	Art.-Nr. 9000870
Art.-Nr. 9000864	Art.-Nr. 9000872
Art.-Nr. 9000866	Art.-Nr. 9000874

Instruction sheet Rainwatertank


3P Rainbowl 210 L



The Rainbowl Water Butt is delivered with a full kit including a brass tap, wall bracket, and screws. To fill the Rainbowl, we recommend using the optional 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the down pipe, longer Universal Long Link Kits are available online (Art. No. 9000123U, U2, to U5).

If in any doubt during installation, please consult a professional tradesman.

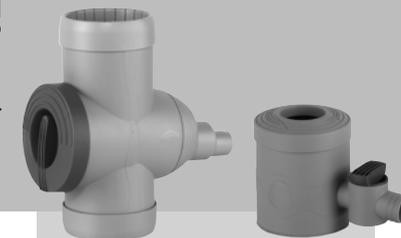



1. Setting up

Site the Rainbowl on a firm, level surface, adjacent to the downpipe.

Fill the tank with water before attaching the wall bracket to avoid deflection.

Refer to your Filter Collector instructions or other rain diverter instructions. Connecting a tap is optional.



2. Fitting an (optional) 3P Filter Collector with Universal Link Kit

Other Diverters & Connectors

For the correct hole size, refer to your diverter's instructions. You *may* be able to use the hole saws supplied by 3P. Check this first.

Marking Out


Measure down 85 mm from the top of the water butt. This position is ideal for connections of 58 mm.

Hole Cutter Selection

To fill the water butt with the recommended 3P Filter Collector, select the 58 mm hole saw from the set provided.

Drilling

Offer the drill to the marked point, proceed to drill the hole at 58 mm. (If you are not fitting a 3P Filter Collector Universal then double-check that you are drilling a correctly sized hole for the connection set that you are using.)

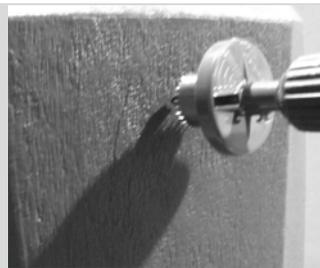

3. Connecting the Tap

Screw the 3/4" brass tap provided in the kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to ensure the tap sits in the correct position.

3P Rainbowl

Art.-Nr. 9000860	Art.-Nr. 9000868
Art.-Nr. 9000862	Art.-Nr. 9000870
Art.-Nr. 9000864	Art.-Nr. 9000872
Art.-Nr. 9000866	Art.-Nr. 9000874



4. Winter Care Precautions

To prevent any damage from being caused, the Timberly must be drained completely and disconnected from the rainwater inlet during freezing weather conditions.